

Instruction Sheet

Digi-Pulse™ Flow Monitor Series FM-PRO


1. With your pump turned off, screw the lower valve fitting of the Digi-Pulse™ Flow Monitor to the discharge side of the pump head.
2. Remove the red Caplug from the top of the Digi-Pulse™. **Be sure to save the O-ring seal and spacer.** Attach your 3FV or 4FV to the top of the Digi-Pulse™.
3. Connect the Digi-Pulse™ cable to your counter, computer, or other recording device (polarity is not critical). If cable extension is desired, consult factory. Plug the FM-PRO-9 cable directly into the receptacle in the Series A9 pump housing.
4. Loosen the locknut of the flow-range knob of the flow monitor and set the knob to the largest dot. Start the pump and adjust it (calibrate, if necessary) for proper output to satisfy your system requirements.
5. With the pump running, gradually turn the adjustment knob of the flow monitor counter-clockwise ↺ until the sensor just begins to trigger your electronic device. This will be the most sensitive setting of the Digi-Pulse™, given your pump setting and fluid properties. Every stroke of the pump will output enough volume of solution to cause the Digi-Pulse™ flow monitor to register a pulse. If the flow drops below the initial pump setting, the Digi-Pulse™ will no longer register strokes to your electronics, indicating some type of pump failure or low-level condition.
6. Tighten the adjustment locknut without altering the adjustment position.

Note:



After the initial pump and Digi-Pulse™ setup is complete, any adjustment of the stroke length of the pump (output per stroke) will require a readjustment of the Digi-Pulse™ flow monitor (repeat steps 4 - 6 above).

To change the flow range setting:

A set screw holds the transmitter body in a notch on the side of the flow monitor. Remove the screw and washer and slide or turn the transmitter 180° to an alternate position and tighten the screw and washer in the hole to secure the transmitter. The Digi-Pulse™ Flow Monitor comes factory set at the "LOW" setting which should accommodate most applications. However, the "INTERMEDIATE" or "HIGH" settings may be appropriate for a particular application if the sensor does not trigger in the "LOW" setting.

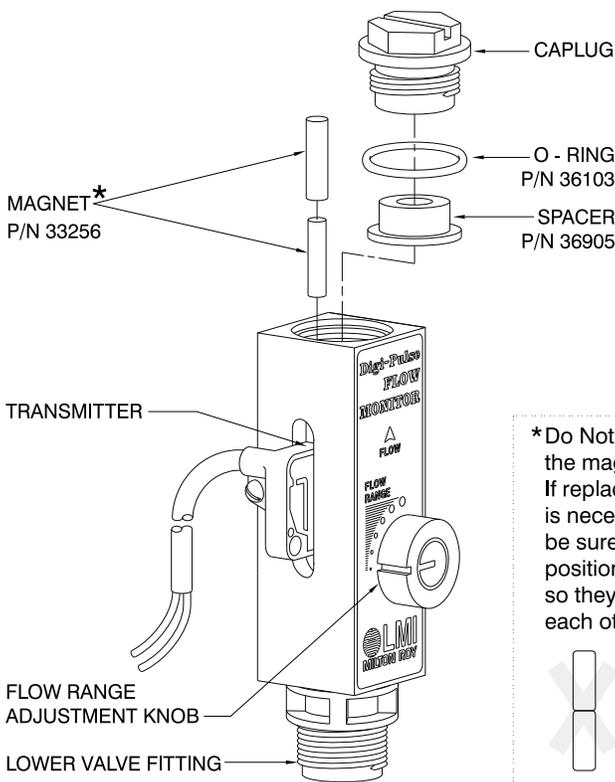

*Do Not remove the magnets. If replacement is necessary, be sure to position them so they repel each other.

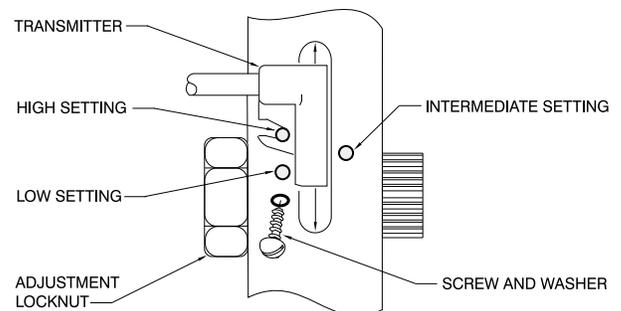

8 Post Office Square
Acton, MA 01720 USA
TEL: (508) 263-9800
FAX: (508) 264-9172
<http://www.lmipumps.com>



Digi-Pulse is a trademark of Liquid Metronics, Inc.
Polyprel is a registered trademark of Liquid Metronics, Inc.